








 


 







 



 



 



 









 
 








 











 







Original	Rechange	Original	Rechange
 Power	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Vol -	 Vol-
 V.Format	 Shift + Picture / Format	 Vol +	 Vol+
 Sleep	 Sleep / Timer	 CH -	 CH- / Page-
 Text	 Text / Goto	 CH +	 CH+ / Page+
 TV / Radio	 TV/Radio /	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Page Down	 Shift + CH- /
 7	 7	 Down	 Down
 8	 8	 Page Up	 Shift + CH+ /
 9	 9	 FAV	 Fav / Marker / PC
 [[=]]	 Smart / List	 Guide	 Guide / EPG / -/-
 0	 0	 Info	 Info / Angle



