

 





















 



 
 








Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / R	 TV/Radio /
 0	 0
 Text	 Text / Goto
 Red / V-FMT	 Display / Media
 Red / V-FMT	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Rechange
 Yellow	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Left / V-	 Vol-
 Left / V-	 Left
 OK	 OK
 Right / V+	 Vol+
 Right / V+	 Right
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home
 SUB	 Subtitle / EQ
 FAV	 Fav / Marker / PC
 Back	 Back / Return





Original		Recharge		Original		Recharge	
	Audio		Audio / Lang I/II				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	FRW		<< / Tune-				
	FFW		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Info		Info / Angle				
	USB		Shift + 8				
	Option		Setup / OPT /				
	Movie		Smart / List				

