







 



 



 









Original	Recharge	Original	Recharge
 Power	 Power		
 Muting	 Mute / Dimmer		
 Track >>I	 >>I / Preset+		
 Function Up	 CH+ / Page+		
 Volume Up	 Vol+		
 I<< Track	 I<< / Preset-		
 Function Down	 CH- / Page-		
 Volume Down	 Vol-		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Play	 Play / Slow		

