



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Tv/Sat	Smart / List
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Subtl	Subtitle / EQ
0	0
FAV	Fav / Marker / PC
EPG	Guide / EPG / -/--
TXT	Text / Goto

Original	Rechange
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Vol+	Vol+
Down	Down
CH/Page+	CH+ / Page+
Vol-	Vol-
CH/Page-	CH- / Page-
Red/SAT	Red / Netflix / Search
Red/SAT	Shift + 0
Green/Zoom	Zoom / Size
Green/Zoom	Green / APP / Repeat
Yellow/PAUSE	Shift + Pause / Step /
Yellow/PAUSE	Yellow / YouTube / Repeat





Original	Rechange
Blue/Tv/Radio	Blue / Prime Video / Random
Blue/Tv/Radio	TV/Radio /
Info	Info / Angle
Audio	Audio / Lang I/II
M-P	Setup / OPT /
RCL	D.Menu / Top
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Slow	+  Shift + Play /
Pause	Pause / Step / Freeze

Original	Rechange

