 

 

 

 



 

 

 

 







 

 

 







 

 



 

 

 

 
 
 



 



 







 





Original		Rechange		Original		Rechange	
	Power		Power		P-		CH- / Page-
	Source		AV / Input / RDS		Vol+		Vol+
	1		1		Vol-		Vol-
	2		2		OK		OK
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu / Home
	8		8		Q.Menu		D.Menu / Top
	9		9		Exit		Exit / Cancel / Clear
	0		0		Media		Display / Media
	Recall		Shift + Back / Return		Back		Back / Return
	Mute		Mute / Dimmer		Guide		Guide / EPG / -/-
	TV		TV/Radio /		FAV		Fav / Marker / PC
	i		Info / Angle		[≡]/Text		Text / Goto
	P+		CH+ / Page+		Netflix		Smart / List





Original	Recharge	Original	Recharge
 www	 Shift + Smart / List		
 Lang	 Audio / Lang I/II		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 [≡]...	 Sound / Title		
 [-O-]	 Picture / Format		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 <<	 << / Tune-		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		

