

 





















 









 
 
 



 


 





 



 

 
 

 



Original	Rechange
 Power	 Power
 Sleep	 Sleep
 TV / AV	 AV
 TV	 Red
 VCR / AUX	 Green
 Tuner / Band	 Yellow
 DVD / CD	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 ≥ 10 / -/--	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 Volume +	 Vol +
 Volume -	 Vol -
 I<< Skip	 I<<
 >>I Skip	 >>I
 << Slow/Search	 <<
 >> Slow/Search	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu / Direct Navigator	 Shift + Menu
 Top Menu / Direct Navigator	 List
 Menu / Play List	 Menu
 Up	 Up





Original		Rechange		Original		Rechange	
	Left		Left		Zoom		Eject
	Enter		Ok		Muting		Mute
	Right		Right		Setup		Options
	Down		Down		FL Display		Shift + Info
	Display / TV Vol -		Info		Group		TV/R
	Display / TV Vol -		Shift + Left		Page		Shift + TV/R
	Return / TV Vol +		Back		Repeat		Text
	Return / TV Vol +		Shift + Right		Play Mode		Shift + Play
	Subwoofer		Shift + Dual		CH Select		Smart
	Super SRND.		Shift + Options		Test		Shift + Pre Ch
	SFC		D. Menu		Quick Replay		Media
	C.Focus		3D		Subtitle		Subt
	Dolby PL II		Format				
	Mix 2CH		Shift + Format				
	C.S.M		Shift + Subt				
	Position		Pre Ch				
	Audio		Dual				

