









 












	Original	Rechange		Original	Rechange
	Open		Power		0
	Open		Eject		Prog
	Repeat		Text		Goto
	A-B		Shift + Text		Setup
	Angle		3D		PAL / NTSC
	Mute		Mute		OSD
	Audio		Dual		Up
	Subtitle		Subt		Left
	1		1		Enter
	2		2		Right
	3		3		Down
	4		4		Menu
	5		5		Remain
	6		6		Title
	7		7		Return
	8		8		Zoom
	9		9		Clear
			Shift + Eject		Exit



