



Original	Recharge
Sleep	Sleep / Timer
Standby AV	Shift + Power
System Standby	Power
Video1	Shift + 4
Video 2	Shift + 1
DVD	Shift + 2
MD/Tape	Shift + 5
CD	Shift + 3
Tuner	Shift + 6
Top Menu	Shift + D.Menu / Top Menu
1 Tuner	1
Up	Up
2 Tuner	2
DVD Menu	D.Menu / Top
3 Tuner	3
Left	Left
4 Tuner	4

Original	Recharge
Enter	OK
5 Tuner	5
Right	Right
6 Tuner	6
7 Tuner	7
Down	Down
8 Tuner	8
Recall	Fav / Marker / PC
9 Tuner	9
>10 Tuner/Shift/-/-	Guide / EPG / -/-
0 Tuner	0
Enter/D.Tuning/Return Tuner	Back / Return
I<</CH/Preset-	I<< / Preset-
I<</CH Preset-Tuner	Shift + I<< / Preset-
>>I/CH/Preset+	>>I / Preset+
>>I/CH Preset+ Tuner	Shift + >>I / Preset+
Tv/Video/ANT	AV / Input / RDS





Original	Rechange
<<	<< / Tune-
>>	>> / Tune+
D.Skip/TV/VTR	TV/Radio /
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
2CH	Sound / Title
A.F.D.	Eject / Surround
Movie/Music	Audio / Lang I/II
Test Tone	Subtitle / EQ
Main Menu	Menu / Home
Multi CH	Picture / Format
< Menu	Shift + Left
Menu >	Shift + Right
Muting	Mute / Dimmer
-	CH- / Page-
+	CH+ / Page+

Original	Rechange
Master Vol+	Vol+
Tv Vol+	Shift + Vol+
Tv CH+	Shift + CH+ /
Master Vol-	Vol-
Tv Vol-	Shift + Vol-
Tv CH-	Shift + CH- /





Original	Recharge
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Recharge
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Recharge
Standby CD	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 CD	1
1 Video 1	Shift + 1
2 CD	2
2 Video 1	Shift + 2
3 CD	3
3 Video 1	Shift + 3
4 CD	4
4 Video 1	Shift + 4
5 CD	5

Original	Recharge
5 Video 1	Shift + 5
6 CD	6
6 Video 1	Shift + 6
7 CD	7
7 Video 1	Shift + 7
8 CD	8
8 Video 1	Shift + 8
9 CD	9
9 Video 1	Shift + 9
>10/Shift/-/ CD	Guide / EPG / -/ -
>10/Shift/-/ Video 1	Shift + Guide / EPG / -/ -
0 CD	0
0 Video 1	Shift + 0
Enter/D.Tuning/Return CD	Back / Return
Enter/D.Tuning/Return Video 1	Shift + Back / Return
I<< CD	I<< / Preset-
I<< Video 1	Shift + I<< / Preset-





Original		Rechange	
 >> CD	 >> / Preset+		
 >> Video 1	 Shift + >> / Preset+		
 <<< CD	 <<< / Tune-		
 <<< Video 1	 Shift + <<< /		
 >>> CD	 >>> / Tune+		
 >>> Video 1	 Shift + >>> /		
 D.Skip/TV/VTR CD	 TV/Radio /		
 D.Skip/TV/VTR Video 1	 Shift + TV/Radio / Program		
 Play CD	 Play / Slow		
 Play Video 1	 Shift + Play /		
 Pause CD	 Pause / Step / Freeze		
 Pause Video 1	 Shift + Pause / Step /		
 Stop CD	 Stop / Hold		
 Stop Video 1	 Shift + Stop /		
 Muting	 Mute / Dimmer		
 Master Vol+	 Vol+		
 Master Vol-	 Vol-		

Original	Rechange





Original	Recharge
Standby	Power
Standby Video	Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	Shift + 1
2 MD/Tape	2
2 Video 2	Shift + 2
3 MD/Tape	3
3 Video 2	Shift + 3
4 MD/Tape	4
4 Video 2	Shift + 4
5 MD/Tape	5


Original	Recharge
5 Video 2	Shift + 5
6 MD/Tape	6
6 Video 2	Shift + 6
7 MD/Tape	7
7 Video 2	Shift + 7
8 MD/Tape	8
8 Video 2	Shift + 8
9 MD/Tape	9
9 Video 2	Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	Shift + I<< / Preset-





Original

Recharge

	>> MD/Tape		>> / Preset+
	>> Video 2		Shift + >> / Preset+
	<< MD/Tape		<< / Tune-
	<< Video 2		Shift + << /
	>> MD/Tape		>> / Tune+
	>> Video 2		Shift + >> /
	D.Skip/TV/VTR MD/Tape		AV / Input / RDS
	D.Skip/TV/VTR Video 2		Shift + AV / Input / RDS
	Play MD/Tape		Play / Slow
	Play Video 2		Shift + Play /
	Pause MD/Tape		Pause / Step / Freeze
	Pause Video 2		Shift + Pause / Step /
	Stop MD/Tape		Stop / Hold
	Stop Video 2		Shift + Stop /
	Muting		Mute / Dimmer
	Master Vol+		Vol+
	Master Vol-		Vol-

Original

Recharge

