


 

 








 
 
 
 

 




 







 
 


 



 



 

 
 
 



 
 


 



 












Original		Rechange		Original		Rechange	
	Power		Power		DVB Menu		Media
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Back		Back
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		Ok
	9		9		AV/Tv		AV
	0		0		EPG		Guide
	-/--	 + 	Shift + Guide		SUBT		Subt
	Recall		Pre Ch		i/Info		Info
	Vol+		Vol +		[≡]/Text		Text
	Vol-		Vol -		[≡+]/Hold		Dual
	Nicam		Smart		[▼]/PGDN		<<





Original	Recharge	Original	Recharge
PGUP	[▲]PGUP		>>
INDEX	[≡i]/Index		Exit
SIZE	[≡◆]/Size		Format
REVEAL	[≡?]/Reveal		TV/R
SUBPAGE	[≡o]/Subpage		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Cyan		Blue
	Sleep		Sleep
	FAV	+	Shift + Pre Ch
	Last		Eject
	P-Mode		3D

Original	Recharge

