




 






Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Nicam	 Smart

Original	Rechange
 DVB Menu	 Media
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 AV/TV	 AV
 EPG	 Guide
 SUBT	 Subt
 i/Info	 Info
 [≡]/Text	 Text
 [≡+]/Hold	 Dual
 [▼]/PGDN	 <<





	Original	Recharge		Original	Recharge
	[▲]PGUP		>>		
	[≡i]/Index		Exit		
	[≡◆]/Size		Format		
	[≡?]/Reveal		TV/R		
	[≡o]/Subpage		D. Menu		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Sleep		Sleep		
	FAV	+	Shift + Pre Ch		
	Last		Eject		
	P-Mode		3D		

