

 





 





 




 
 
 













 
 


 










	Original	Rechange		Original	Rechange
	Power		Power		Format
	Mute		Mute		Subt
	Home		Smart		Dual
	Home		Menu		TV/R
	Up		Up		Eject
	Left		Left		Pause
	Play / Enter		Ok		Stop
	Play / Enter		Play		AV
	Right		Right		I<<
	Down		Down		<<
	Vol +		Vol +		>>
	Vol -		Vol -		>>I
	Info		Info		
	Back		Back		
	Setup		Options		
	List		List		
	Repeat		Text		

