




 

 
 
 


 










 
 










 

 
 
 
 

 



 






Original		Rechange		Original		Rechange	
	Power		Power		Smart Picture		Format
	⊖		Sleep		Menu		Menu
	Exit		Exit		Text / OK		Ok
	I-II		Dual		Text / OK		Text
	I.S.		Smart		Up		Up
	[i+]		Info		Left		Left
	1		1		Right		Right
	2		2		Down		Down
	3		3		Vol +		Vol +
	4		4		Vol -		Vol -
	5		5		Mute		Mute
	6		6		P +		Ch +
	7		7		P -		Ch -
	8		8		Red / Rec		Red
	9		9		Red / Rec		Rec
	0		0		Green / <<		Green
	Smart Audio		Shift + Dual		Green / <<		<<





Original	Recharge
Yellow / Stop	Yellow
Yellow / Stop	Stop
Blue / Play	Blue
Blue / Play	Play
[X]	SHIFT + CLEAR EXIT Shift + Exit
[♦] / ⊕	3D 3D
[□] / >>	SHIFT + Stop Shift + Stop
[□] / >>	>> >>
[/ =]	SHIFT + REPEAT TEXT Shift + Text
[?]	SEARCH TV/R TV/R
[≡ i]	GUIDE Guide

Original	Recharge

