






 




 

 

 

 

















 

 





 



















 





 
 







 


 



 
 





Original	Rechange	Original	Rechange
 Power	 Power	 +/-	 Shift + Guide / EPG / +/-
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Aspect	 Shift + Picture / Format	 Red	 Red / Netflix / Search
 P.Mode	 Picture / Format	 Green	 Green / APP / Repeat
 S.Mode	 Sound / Title	 Yellow	 Yellow / YouTube / Repeat
 Audio / Nicam	 Audio / Lang I/II	 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Menu	 Menu / Home
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Vol +	 Vol+
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 CH +	 CH+ / Page+
 0	 0	 Vol -	 Vol-





Original	Recharge
 Display	 Display / Media
 CH -	 CH- / Page-
 TXT	 Text / Goto
 Index	 Setup / OPT /
 Hold	 Shift + Stop /
 Mix	 Shift + Text /
 Subpage	 Eject / Surround
 Reveal / Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Rec / Goto /	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 TV / Radio	 TV/Radio /
 FAV	 Fav / Marker / PC
 Play / Pause	 Play / Slow
 Play / Pause	 Shift + Play /
 Stop	 Stop / Hold

Original	Recharge
 PVR Menu	 D.Menu / Top
 Media	 Shift + Display / Media
 L<<	 L<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

