



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 EPG	 Guide / EPG / -/--
 0	 0
 TV / R	 TV/Radio /
 Menu	 Menu / Home
 Sortie	 Exit / Cancel / Clear
 Up	 Up

Original	Recharge
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol +	 Vol+
 Info	 Info / Angle
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Audio	 Audio / Lang I/II
 CH -	 CH- / Page-
 Red / RCL	 Red / Netflix / Search
 Green / Pause	 Shift + Green / APP /
 Green / Pause	 Green / APP / Repeat
 Yellow / Sous	 Yellow / YouTube / Repeat
 Yellow / Sous	 Shift + Yellow / YouTube /
 Blue / Text	 Shift + Blue / Prime
 Blue / Text	 Blue / Prime Video / Random





Original		Rechange		Original		Rechange	
	FAV		Fav / Marker / PC				
	SAT		+ 0	Shift + 0			
	V.F		Setup / OPT /				
	Pause		Pause / Step / Freeze				
	<		+	Shift + << /			
	>		+	Shift + >> /			
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Stop		Stop / Hold				

