




Original	Rechange
 Power	 Power
 Energy Saving	 Shift + 3D
 AV Mode	 Shift + AV
 Input	 AV
 TV / Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Shift + Pre Ch

Original	Rechange
 Vol +	 Vol +
 Vol -	 Vol -
 FAV / Mark / Char/Num	 Pre Ch
 3D	 3D
 Mute / Delete	 Mute
 P + / Page +	 Ch +
 P - / Page -	 Ch -
 Menu	 Menu
 NetCast	 Smart
 Q.Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 @	 Media





Original		Rechange		Original	Rechange
	Exit		Exit		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue / L/R Select		Blue		
	Text		Text		
	Subtitle		Subt		
	T.Opt		Options		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		
	Simplink		Format		
	Guide		Guide		
	Info		Info		
	AD		Shift + Subt		

