











 




 



 









 






Original	Recharge
	
Power	Power
	
Stop	Stop
	
Pause	Pause
	
Rec	Rec
	
<<	<<
	
Play	Play
	
>>	>>
	
*	Menu
	
Search	TV/R
	
Bluetooth	Pre Ch
	
TV Guide	Guide
	
List	List
	
Sources	AV
	
Smart Tv	Smart
	
Home	Shift + Smart
	
Exit/TV	Exit
	
Red	Red

Original	Recharge
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Info	Info
	
Options	Options
	
←/Back	Back
	
[<>]/Format	Format
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
OK	Ok
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
Netflix	Media
	
CH+	Ch +





Original	Recharge	Original	Recharge
1			
2			
3			
4			
5			
6			
7			
8			
9			
0			

Original	Recharge

