



 

 



 

 

 

 
 
 
 

 
 

 
 

 
 


 

 


Original	Recharge	Original	Recharge
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Display	 Shift + Info
Update	 List	Menu Off	 Exit
Reveal	 Dual	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Menu video	 Options	1	 1
Text	 Text	2	 2
Txt Expand	 Eject	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Original	Rechange	Original	Rechange
9	 9	Tune-	 <<
Guide -/-- 1.	 Guide	Tune+	 >>
0/10	 0	Contrast-	 +  Shift + Ch -
Disp	 +  Shift + AV	Surround	 +  Shift + Red
Aft/Caf	 +  Shift + 3D	4.# 16:9	 Format
2.Fav P/C 2.	 Pre Ch	Nicam/Mono	 +  Shift + Green
Red	 Red	Color+ P.Std	 +  Shift + Format
Green	 Green	Level L	 +  Shift + Yellow
Yellow	 Yellow	Level R/Woofer	 +  Shift + Blue
Rotate Text	 D. Menu	Audio+	 >>
Mix Scan	 Smart	Tone+	 +  Shift + Vol +
Store Text	 +  Shift + Text	Audio-	 <<
Bright+ Mode	 3D		
Browse	 Media		
Blue	 Blue		
Tone-	 +  Shift + Vol -		
Contrast+	 +  Shift + Ch +		

