




Original	Recharge	Original	Recharge
 Power	 Power	 Vol +	 Vol +
 Input	 AV	 Vol -	 Vol -
 TV / TXT	 Text	 Menu	 Menu
 Cancel	 Shift + Exit	 Mute	 Mute
 Reveal	 Smart	 Up	 Up
 Nicam / A2	 Options	 Left	 Left
 Hold	 Stop	 OK	 Ok
 Size	 Format	 Right	 Right
 Subpage	 Shift + Subt	 Down	 Down
 Index	 Shift + Info	 DVB	 Media
 Red / TV/Radio	 Red	 Exit	 Exit
 Red / TV/Radio	 TV/R	 1	 1
 Green	 Green	 2	 2
 Yellow	 Yellow	 3	 3
 Blue	 Blue	 4	 4
 CH +	 Ch +	 5	 5
 CH -	 Ch -	 6	 6





	Original	Rechange	Original	Rechange
	 7	 7	 FAV +	 >>I
	 8	 8		
	 9	 9		
	 0	 0		
	 -/--	 Shift + Guide		
	 Recall	 Back		
	 Picture	 Shift + Format		
	 Sound	 Shift + Dual		
	 Sleep	 Sleep		
	 Subtitle	 Subt		
	 Language	 Dual		
	 Display / Info	 Info		
	 Zoom	 Eject		
	 Text	 Shift + Text		
	 FAV	 Pre Ch		
	 EPG	 Guide		
	 FAV -	 I<<		

