







 

 

 

 

 



 

 

 



 

 

 







 







 



 



 



 









 

 

 

 

 

 

 

 



 

 



Original		Rechange		Original		Rechange	
	D.Menu		D.Menu / Top		7		7
	Power		Power		8		8
	Open / Close		Eject / Surround		9		9
	Info		Info / Angle		Source		AV / Input / RDS
	P.Mode		Picture / Format		0		0
	S.Mode		Sound / Title		Q.View		Shift + Menu /
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	Audio I/II		Audio / Lang I/II		Guide		Guide / EPG / -/-
	Subtitle		Subtitle / EQ		Vol +		Vol+
	CH. List		Smart / List		P+		CH+ / Page+
	Screen		TV/Radio /		Vol -		Vol-
	1		1		P -		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		FAV		Fav / Marker / PC
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK





Original	Recharge
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Record	 Rec / Rec Mode
 [X] / Repeat	 Back / Return
 ► / Index	 Play / Slow
 ■■ Pause	 Pause / Step / Freeze
 ■ Stop	 Stop / Hold
 Red / ◀◀ / REV	 Shift + Red / Netflix / Search
 Red / ◀◀ / REV	 Red / Netflix / Search
 Green / ▶▶ / FWD	 Shift + Green / APP / Repeat
 Green / ▶▶ / FWD	 Green / APP / Repeat
 Yellow / ◀◀◀ / Prev	 Shift + Yellow / YouTube / Repeat A-B
 Yellow / ◀◀◀ / Prev	 Yellow / YouTube / Repeat
 Blue / ▶▶▶ / Next	 Blue / Prime Video / Random
 Blue / ▶▶▶ / Next	 Shift + Blue / Prime
 [≡] / Setup	 Setup / OPT /

Original	Recharge
 [≡] / Setup	 Shift + Setup / OPT / Tools
 [/≡] / Title	 Shift + Sound / Title
 [....] / Search	 Text / Goto
 [....] / Search	 Shift + Text /
 [□] / 10+	 Shift + 9
 [□] / 10+	 Shift + 0
 [?] / Program	 Shift + Guide / EPG / -/-
 [◆] / A-B	 Shift + Fav / Marker / PC
 ⊕ / Angle / Rec. List	 Shift + TV/Radio / Program
 ⊕ / Angle / Rec. List	 Shift + Sleep / Timer
 D.Call	 Shift + D.Menu / Top Menu

