

 











 











 









 













 













 

























 







Original	Recharge	Original	Recharge
 Power	 Power	 0	 0
 Video	 Shift + 4	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Goto	 Text / Goto
 Open / Close	 Eject / Surround	 <<	 << / Tune-
 USB	 Shift + 8	 Vol -	 Vol-
 Prog	 TV/Radio /	 Vol +	 Vol+
 Mark	 Fav / Marker / PC	 I<<	 I<< / Preset-
 Clear	 Exit / Cancel / Clear	 Play / Pause	 Play / Slow
 1	 1	 Stop	 Stop / Hold
 2	 2	 >>	 >> / Tune+
 3	 3	 Repeat	 Green / APP / Repeat
 4	 4	 A-B	 Yellow / YouTube / Repeat
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Menu / Ripping	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Setup	 Setup / OPT /
 9	 9	 Left	 Left





Original	Recharge	Original	Recharge
 Enter	 OK		
 Right	 Right		
 Title	 Sound / Title		
 Down	 Down		
 OSD	 Display / Media		
 Zoom	 Zoom / Size		
 Angle	 Info / Angle		
 Audio	 Audio / Lang I/II		
 Sub-T	 Subtitle / EQ		
 Step	 Pause / Step / Freeze		
 Slow	 Shift + Play /		
 Return	 Back / Return		
 Default	 D.Menu / Top		

