










 



 





 

 





 

 















Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 EPG	 Guide
 Menu	 Menu
 Exit	 Exit
 OK/List	 Ok

Original	Recharge
 ←PR	 Back
 FAV	 Pre Ch
 Up	 Up
 PR+	 Ch +
 PR-	 Ch -
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Red/Find	 Red
 Green/Zoom	 Green
 Yellow	 Yellow
 Text	 Text
 Blue	 Blue
 Audio L/R	 Dual
 Info	 Info





	Original	Rechange		Original	Rechange
	Tv/AV	 AV			
	Sleep	 SLEEP			
	[+]	 OPT			
	Record	 REC MODE			
	Play	 PLAY MODE			
	Stop	 STOP			
	Shift	 APP MEDIA			
	<< Fast				
	Fast >>				
	< Slow				
	Slow >				
	Pause				
	↑/Page+	 ECO 3D			
	↓/Page-	 PICTURE FORMAT			

	Original	Rechange

