



| Original | Rechange |
|------------------|----------|
| Standby/On | Power |
| Input Select | AV |
| HDMI | D. Menu |
| Open/Close/Eject | Eject |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Setup | Options |
| Clear | Exit |
| Prog+ | Ch + |

| Original | Rechange |
|-------------------|--------------|
| Prog- | Ch - |
| Timer/Prog | Sleep |
| [i+] | Info |
| Text | Text |
| Variable Skip/→ | Media |
| Variable Replay/→ | Smart |
| Guide | Guide |
| Top Menu | Shift + Menu |
| Menu/List | Menu |
| Display | Shift + Info |
| Return/Back | Back |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| Enter/OK | Ok |
| Red | Red |



