 



 



 

 

 

 







 



 





 

 



 

 

 

 

 
 




 









Original	Recharge	Original	Recharge
 Power	 Power	 e	 Smart / List
 Resync	 Back / Return	 Page Down	 CH- / Page-
 Source	 AV / Input / RDS	 1/RGB	 1
 Freeze	 Pause / Step / Freeze	 2/Brightness	 2
 Hide	 Display / Media	 3/Color	 3
 Aspect/Ratio	 Picture / Format	 Contrast	 Info / Angle
 Up	 Up	 4/VGA	 4
 PIP	 TV/Radio /	 5/Component	 5
 Left	 Left	 6/Video	 6
 Menu	 Menu / Home	 S-Video	 Guide / EPG / -/-
 Right	 Right	 7/DVI	 7
 Zoom	 Zoom / Size	 8/HDMI	 8
 Down	 Down	 9/Wireless	 9
 Location	 Setup / OPT /	 0/Mute	 0
 Vol+	 Vol+		
Page Up	CH+ / Page+		
Vol-	Vol-		

