



Original		Recharge		Original		Recharge	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		*		D.Menu / Top
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	EPG		Guide / EPG / -/--		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	Vol+		Vol+		*1		Smart / List
	Input		AV / Input / RDS		*2		Display / Media
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original	Recharge	Original	Recharge
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Audio		Audio / Lang I/II

