 















 

 
 
 

 

 

 


 




| Original | Recharge |
|---|---|
|  RCVR On |  Power |
|  RCVR Standby |  Shift + Power |
|  RCVR Return |  Back |
|  RCVR Setup |  Options |
|  RCVR |  Ch + |
|  RCVR CH-/Disc- |  Ch - |
|  RCVR Vol+ |  Vol + |
|  RCVR Vol- |  Vol - |
|  RCVR CH Sel / Top Menu |  Shift + Menu |
|  RCVR CH Sel / Top Menu |  D. Menu |
|  RCVR Test / Menu |  Menu |
|  RCVR Audio Sel / TV/VCR |  TV/R |
|  RCVR Muting |  Mute |
|  RCVR Up |  Up |
|  RCVR Left |  Left |
|  RCVR Enter |  Ok |
|  RCVR Right |  Right |

| Original | Recharge |
|--|--|
|  RCVR Down |  Down |
|  RCVR Angle / Level Down |  Format |
|  RCVR Subtitle / Level Up |  Subt |
|  RCVR I<< |  I<< |
|  RCVR Play |  Play |
|  RCVR >>I |  >>I |
|  RCVR << |  << |
|  RCVR Stop |  Stop |
|  RCVR >> |  >> |
|  RCVR Rec / |  Rec |
|  RCVR Play Rev. |  Pause |
|  RCVR Input Sel. |  1 |
|  RCVR Input Sel. |  2 |
|  RCVR Input Sel. |  3 |
|  RCVR Input Sel. |  4 |
|  RCVR Input Sel. |  5 |
|  RCVR Input Sel. |  6 |





Original

Rechange

| | | | |
|---|-----------------|---|-----------|
|  | RCVR Input Sel. |  | 7 |
|  | RCVR Input Sel. |  | 8 |
|  | RCVR Input Sel. |  | 9 |
|  | RCVR Input Sel. |  | 0 |
|  | RCVR Pure A |  | Shift + 1 |
|  | RCVR Direct |  | Shift + 2 |
|  | RCVR Stereo |  | Shift + 3 |
|  | RCVR Surr. |  | Shift + 4 |
|  | RCVR All St. |  | Shift + 5 |
|  | RCVR DSP |  | Shift + 6 |
|  | SP A |  | Shift + 7 |
|  | SP B |  | Shift + 8 |
|  | CINE FLTR |  | Shift + 9 |
|  | RCVR Dimmer |  | Shift + 0 |
|  | RCVR Display |  | Info |
|  | RCVR Display |  | Guide |
|  | RCVR Zone 2 |  | Pre Ch |

 


 
 






















 







 



 

 

 

 

 

 

 
 
 







 


 


 
Original

Rechange

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |









 

 
 

 



 

 





 



 


 
 
 




| Original | | Recharge | | Original | | Recharge | |
|---|------------------------|---|---------------|---|-------------------|---|-------|
|  | DVD On |  | Power |  | DVD Play |  | Play |
|  | DVD Standby |  | Shift + Power |  | DVD >>I |  | >>I |
|  | DVD Sleep |  | Sleep |  | DVD << |  | << |
|  | DVD Return |  | Back |  | DVD Stop |  | Stop |
|  | DVD Setup |  | Options |  | DVD >> |  | >> |
|  | DVD Disc+ |  | Ch + |  | DVD Random |  | Rec |
|  | DVD Disc- |  | Ch - |  | DVD Pause |  | Pause |
|  | DVD Vol+ |  | Vol + |  | DVD Eject |  | Exit |
|  | DVD Vol- |  | Vol - |  | DVD Input Sel. |  | 1 |
|  | DVD CH Sel / Top Menu |  | Shift + Menu |  | DVD Input Sel. CD |  | 2 |
|  | DVD CH Sel / Top Menu |  | D. Menu |  | DVD Input Sel. V1 |  | 3 |
|  | DVD Test / |  | Menu |  | DVD Input Sel. V2 |  | 4 |
|  | DVD Audio Sel / TV/VCR |  | TV/R |  | DVD Input Sel. |  | 5 |
|  | Muting |  | Mute |  | DVD Input Sel. |  | 6 |
|  | DVD Angle / |  | Format |  | DVD Input Sel. V3 |  | 7 |
|  | DVD Subtitle / Level+ |  | Subt |  | DVD Input Sel. V4 |  | 8 |
|  | DVD I<< |  | I<< |  | DVD Input Sel. V5 |  | 9 |



 

 

 





 
 



 



 
 


 







 

 

 




















| Original | Recharge |
|--|--|
|  DVD Input Sel. PH |  0 |
|  DVD 1 |  +  Shift + 1 |
|  DVD 2 |  +  Shift + 2 |
|  DVD 3 |  +  Shift + 3 |
|  DVD 4 |  +  Shift + 4 |
|  DVD 5 |  +  Shift + 5 |
|  DVD 6 |  +  Shift + 6 |
|  DVD 7 |  +  Shift + 7 |
|  DVD 8 |  +  Shift + 8 |
|  DVD 9 |  +  Shift + 9 |
|  DVD 0 |  +  Shift + 0 |
|  DVD +10 / --/-- |  Guide |
|  DVD Search/Enter |  PRE-CH |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|---------------|---|-----|---|-------|
|  | On |  | Power |  | 2 |  | 2 |
|  | Standby |  | Shift + Power |  | 3 |  | 3 |
|  | Disc+ |  | Ch + |  | 4 |  | 4 |
|  | Vol+ |  | Vol + |  | 5 |  | 5 |
|  | Vol- |  | Vol - |  | 6 |  | 6 |
|  | Muting |  | Mute |  | 7 |  | 7 |
|  | Subtitle |  | Subt |  | 8 |  | 8 |
|  | I<< |  | I<< |  | 9 |  | 9 |
|  | Play |  | Play |  | 0 |  | 0 |
|  | >>I |  | >>I |  | +10 |  | Guide |
|  | << |  | << | | | | |
|  | Stop |  | Stop | | | | |
|  | >> |  | >> | | | | |
|  | Pause |  | Pause | | | | |
|  | Random |  | Rec | | | | |
|  | Eject |  | Eject | | | | |
|  | 1 |  | 1 | | | | |

