


 

 
 







 

 

 
 
 



 



















 


Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 TXT	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Source	 AV

Original	Rechange
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 G	 Guide
 i	 Info
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 YouTube	 Shift + Media
 *1	 Format
 Prime Video	 Shift + Smart
 Red	 Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 <<<	 <<<		
 Pause	 Pause		
 >>>	 >>>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

