



 















 


 


























 















 





Original	Rechange	Original	Rechange
 Power	 Power	 Source	 AV / Input / RDS
 1	 1	 P+	 CH+ / Page+
 2	 2	 Home	 Menu / Home
 3	 3	 G	 Guide / EPG / -/-
 4	 4	 i	 Info / Angle
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 0	 0	 Exit	 Exit / Cancel / Clear
 TXT	 Text / Goto	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Mute	 Mute / Dimmer	 *1	 Picture / Format
 P-	 CH- / Page-	 Prime Video	 Shift + Blue / Prime
 Vol-	 Vol-	 Red	 Red / Netflix / Search

Original	Rechange	Original	Rechange
 Source	 AV / Input / RDS	 TV	 AUX
 P+	 CH+ / Page+	 DVD	 SLOW
 Home	 Menu / Home	 SAT	 STEP-FREEZE
 G	 Guide / EPG / -/-	 HOLD	 REC MODE
 i	 Info / Angle	 PRESET-	 PRESET+
 Up	 Up	 TUNE-	 TUNE+
 Left	 Left	 PRESET-	 PRESET+
 OK	 OK	 EQ	 SURROUND
 Right	 Right	 SOUND	 AUDIO
 Down	 Down	 SUBTITLE	 TIMER
 Back	 Back / Return	 PICTURE	 ZOOM
 Exit	 Exit / Cancel / Clear	 SLEEP	 PROGRAM
 Netflix	 Shift + Red / Netflix /	 TOP MENU	 OPT-TOOLS
 YouTube	 Shift + Yellow / YouTube /	 GOTO	 RDS
 *1	 Picture / Format	 D.MENU	 SETUP
 Prime Video	 Shift + Blue / Prime	 TEXT	 TV RADIO
 Red	 Red / Netflix / Search	 HOME	 ANGLE



