
 

 



 

 
 









Original	Rechange
 DVD Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Open / Close	 Exit
 Setup	 Options
 Zoom	 Eject
 3D Sound	 3D
 Bookmark	 Pre Ch
 Volume Con.	 Guide

Original	Rechange
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Return	 Back
 Step	 Shift + Pause
 Clear	 Shift + Exit
 Top Menu	 Shift + Menu
 Top Menu	 D. Menu
 Display	 Info
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok





Original		Recharge		Original		Recharge	
	Right		Right				
	Down		Down				
	Audio		Dual				
	Sub Title		Subt				
	Angle		Format				
	Repeat		Text				
	Repeat A-B		Shift + Text				

