



Original	Recharge
DVD Power	Power
Select Drive	Eject
Power TV	Shift + Power
AV TV	Shift + AV
CH + TV	Shift + Ch +
CH - TV	Shift + Ch -
Vol + TV	Vol +
Vol - TV	Vol -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Recharge
0	0
*	Exit
Input Select	AV
CH / Page +	Ch +
CH / Page -	Ch -
ShowView	Media
Delete	Pre Ch
I<< Skip	I<<
Skip >>I	>>I
<< Slow / Search	<<
Slow / Search >>	>>
Stop	Stop
Pause	Pause
Play / x1.3	Play
i	Info
Prog / Check	Sleep
Guide	Guide





Original	Recharge
Direct Navigator	Smart
Functions	Menu
S / Sub Menu	Options
Return	Back
Up	Up
Down	Down
Right / II>	Right
<II / Left	Left
Enter	Ok
Red	Red
Green	Green
Yellow / Create Chapter	Yellow
Blue / Manual	Blue
Rec	Rec
Rec Mode	Shift + Rec
Ext Link	3D
Direct Tv Rec	TV/R

Original	Recharge
Audio	Dual
F Rec	List
Display	Shift + Info
Time Slip	Shift + Pre Ch

