 







 

 





 

 

 





 

 

 






 


Original	Rechange
 Power	 Power
 A/V Mute	 Mute / Dimmer
 Freeze	 Pause / Step / Freeze
 E-Zoom-	 I<< / Preset-
 E-Zoom+	 >>I / Preset+
 Color Mode	 Picture / Format
 Resize	 D.Menu / Top
 Easy-MP	 Setup / OPT /
 Source/Search	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Auto	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Esc	 Exit / Cancel / Clear
 Down	 Down

Original	Rechange
 ?/Help	 Back / Return
 Vol+	 Vol+
 Pointer	 Smart / List
 Page Up	 CH+ / Page+
 Vol-	 Vol-
 S-Video	 Display / Media
 Page Down	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





	Original	Rechange	Original	Rechange
	Computer	 Fav / Marker / PC		
	Video	 Guide / EPG / -/--		

