



	Original	Rechange	Original	Rechange
	Power			Stop
	TV/AV			Vol+
	1			Vol-
	2			Mute
	3			Up/CH+
	4			Down/CH-
	5			Right
	6			Left
	7			Ok
	8			Sys Menu
	9			Display
	0			Picture
	-/--			Sound
	Return			Timer
	Eject			Nicam/A2
	Play			Lan/Prog-
	Pause			Zoom/Prog+





Original		Rechange		Original		Rechange	
	SUB		Subt				
	Goto		TV/R				
	Set/Tv/TXT/DVB		Text				
	Menu/Cancel Tv Format		Menu				
	Lang/Reveal Exit		Dual				
	Title/Info		Info				
	<</Hold		<<				
	>>/Size Text		>>				
	I<</Subpage/F		I<<				
	>>I/Index/EPG		>>I				
	Red/Prog/Tv/Radi		Red				
	Green/Slow/Audio		Green				
	Yellow/Rep/Freeze		Yellow				
	Blue/A-B/Subtitle		Blue				

