











 

 

 





 

 

 









Original		Rechange		Original		Rechange	
	Power		Power		F1 / Find		D.Menu / Top
	Mute		Mute / Dimmer		F2 / Zoom		Zoom / Size
	Red		Red / Netflix / Search		F2 / Zoom		Setup / OPT /
	Green / Aspect		Green / APP / Repeat		F3 / TXT		Smart / List
	Green / Aspect		Picture / Format		F3 / TXT		Text / Goto
	Yellow		Yellow / YouTube / Repeat		F4		Display / Media
	Blue / SUBT		Subtitle / EQ		Menu		Menu / Home
	Blue / SUBT		Blue / Prime Video / Random		Up / CH+		Up
	<<		<< / Tune-		Info		Info / Angle
	>>		>> / Tune+		Left / Vol-		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right / Vol+		Right
	USB		Shift + 8		FAV		Fav / Marker / PC
	Play / Pause		Play / Slow		Down / CH-		Down
	Play / Pause		Pause / Step / Freeze		Exit		Exit / Cancel / Clear
	Stop		Stop / Hold		Vol+		Vol+
	Rec		Rec / Rec Mode		EPG		Guide / EPG / -/-





Original		Rechange		Original		Rechange	
	Pag+		CH+ / Page+				
	Vol-		Vol-				
	Audio		Audio / Lang I/II				
	Pag-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Recall		Back / Return				
	0		0				
	TV / Radio		TV/Radio /				

















 




 

 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		F1 / Find		D.Menu / Top
	Mute		Mute / Dimmer		F2 / Zoom		Setup / OPT /
	Red		Red / Netflix / Search		F2 / Zoom		Zoom / Size
	Green / Aspect		Picture / Format		F3 / TXT		Text / Goto
	Green / Aspect		Green / APP / Repeat		F3 / TXT		Smart / List
	Yellow		Yellow / YouTube / Repeat		F4		Display / Media
	Blue / SUBT		Subtitle / EQ		Menu		Menu / Home
	Blue / SUBT		Blue / Prime Video / Random		Up / CH+		Up
	<<		<< / Tune-		Info		Info / Angle
	>>		>> / Tune+		Left / Vol-		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right / Vol+		Right
	USB		Shift + 8		FAV		Fav / Marker / PC
	Play / Pause		Play / Slow		Down / CH-		Down
	Play / Pause		Pause / Step / Freeze		Exit		Exit / Cancel / Clear
	Stop		Stop / Hold		Vol+		Vol+
	Rec		Rec / Rec Mode		EPG		Guide / EPG / -/-





Original		Recharge		Original		Recharge	
	Pag+		CH+ / Page+				
	Vol-		Vol-				
	Audio		Audio / Lang I/II				
	Pag-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Recall		Back / Return				
	0		0				
	TV / Radio		TV/Radio /				

