



Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep
	Mute		Mute		Display		Info
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Aspect		Format
	9		9		Source		AV
	0		0		P.Mode		Shift + Format
	-/--		Guide		S.Mode		Shift + Dual
	Recall		Back		Exit		Exit
	Vol+		Vol +		Menu		Menu
	Vol-		Vol -		Media		Media
	Nicam		Dual		Play / Pause		Play





Original	Rechange
Play / Pause	Pause
I<<	I<<
>>I	>>I
Rec	Rec
Stop / Hold	Stop
<< / Index	<<
>> / Size	>>
Text	Text
FAV	Pre Ch
FAV-	Shift + Down
FAV+	Shift + Up
Reveal	Smart
Cancel	Shift + Exit
Subpage	Shift + Subt
Subtitle	Subt
Red / TV/Radio	Red
Green	Green

Original	Rechange
Yellow	Yellow
Blue	Blue

