







Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep
	Mute		Mute		Display		Info
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Aspect		Format
	9		9		Source		AV
	0		0		P.Mode		Shift + Format
	-/--		Guide		S.Mode		Shift + Dual
	Recall		Back		Exit		Exit
	Vol+		Vol +		Menu		Menu
	Vol-		Vol -		Media		Media
	Nicam		Dual		Play / Pause		Play





Original	Rechange
 Play / Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Rec	 Rec
 Stop / Hold	 Stop
 << / Index	 <<
 >> / Size	 >>
 Text	 Text
 FAV	 Pre Ch
 FAV-	 Shift + Down
 FAV+	 Shift + Up
 Reveal	 Smart
 Cancel	 Shift + Exit
 Subpage	 Shift + Subt
 Subtitle	 Subt
 Red / TV/Radio	 Red
 Green	 Green

Original	Rechange
 Yellow	 Yellow
 Blue	 Blue

