





 

 

 



 



 

 

 





 

 





 





 


 

 
 

 


 




 
 
 
 








Original	Rechange
 TV Direct	 Smart / List
 Power DVD	 Red / Netflix / Search
 Power VCR	 Green / APP / Repeat
 Power Audio	 Power
 Power STB	 Yellow / YouTube / Repeat
 Power TV	 Blue / Prime Video / Random
 DVD	 2
 VCR	 4
 TV	 1
 FM/AM	 6
 Tv/Video	 5
 Muting	 Mute / Dimmer
 Channel+	 CH+ / Page+
 Volume+	 Vol+
 Channel-	 CH- / Page-
 Volume-	 Vol-
 Display/On	 Display / Media

Original	Rechange
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 Analog/Digital Input	 AV / Input / RDS
 Smart S Setup	 Setup / OPT /
 Bass Boost	 Audio / Lang I/II
 C. Tone	 Subtitle / EQ
 A. Position	 D.Menu / Top
 Test Tone	 Text / Goto
 Effect	 Info / Angle
 Decode	 TV/Radio /
 Surround	 Eject / Surround
 Subwfr+	 Right
 Center+	 Up
 Surr L+	 Shift + Vol+
 Surr R+	 Shift + CH+ /
 Subwfr-	 Left
 Center-	 Down

 


Screen



Original		Rechange		Original		Rechange	
	Surr L-		Shift + Vol-				
	Surr R-		Shift + CH- /				



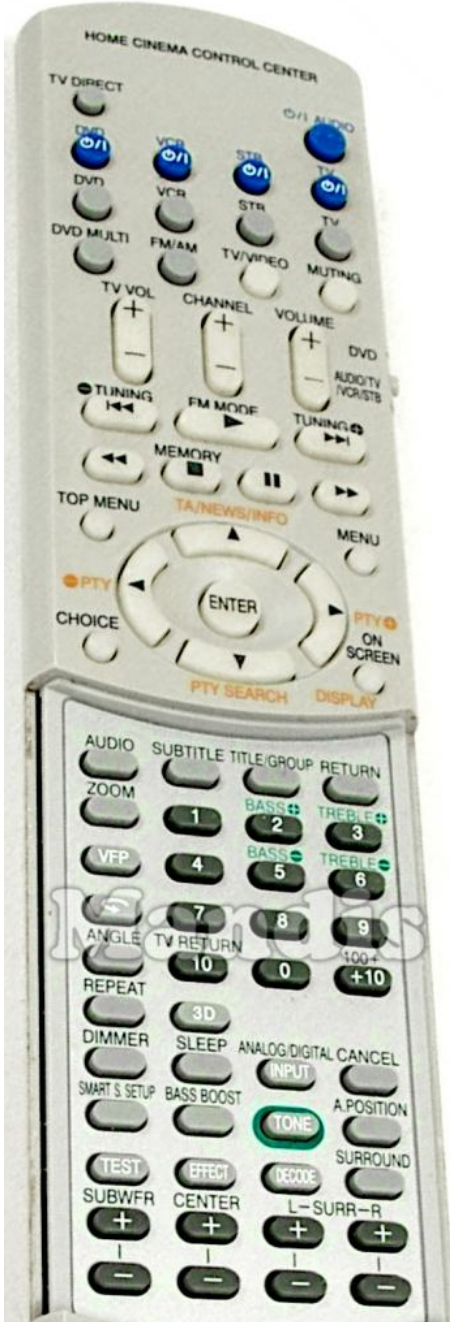 


Original	Rechange
Power Audio	Power
Power Tv	+  Shift + Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
Tuning- FM/AM	<< / Tune-
FM Mode FM/AM	Smart / List
Tuning+ FM/AM	>> / Tune+
Memory FM/AM	Menu / Home
TA/News/Info	Info / Angle
TA/News/Info	Up
PTY- FM/AM	Left
PTY+ FM/AM	Right
PTY Search	Down
PTY Search	Red / Netflix / Search

Original	Rechange
Display FM/AM	Display / Media
1 FM/AM	+  Shift + 1
1 TV	1
2 FM/AM	+  Shift + 2
2 TV	2
3 FM/AM	+  Shift + 3
3 TV	3
4 FM/AM	+  Shift + 4
4 TV	4
5 FM/AM	+  Shift + 5
5 TV	5
6 FM/AM	+  Shift + 6
6 TV	6
7 FM/AM	+  Shift + 7
7 TV	7
8 FM/AM	+  Shift + 8
8 TV	8

 



FM/AM

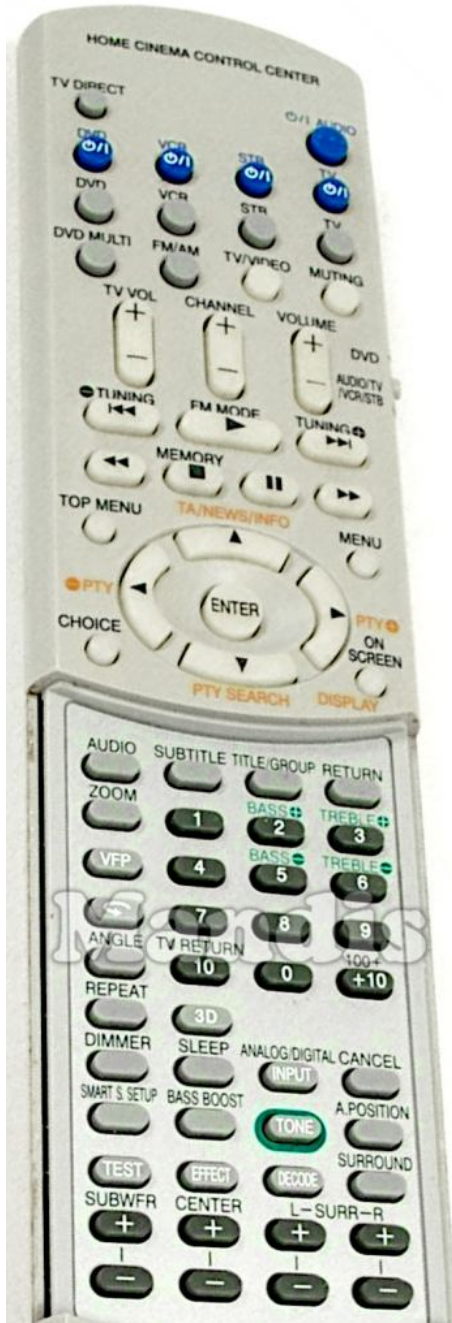

	Original	Recharge		Original	Recharge
	9 FM/AM	SHIFT + BLUETOOTH 9	Shift + 9		
	9 TV	BLUETOOTH 9	9		
	TV RETURN 10 FM/AM	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC		
	TV RETURN 10 10/Tv Return TV	SHIFT + HDMI - SAT 0	Shift + 0		
	0 TV	HDMI - SAT 0	0		
	+10/100+	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-		
	+10 TV	PC FAV MARKER	Fav / Marker / PC		

 


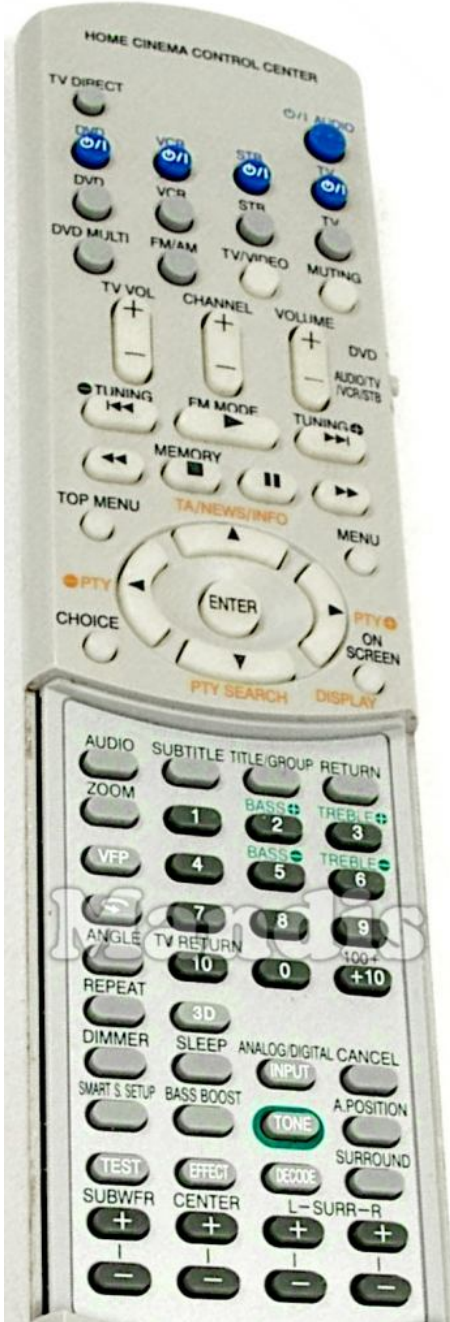



 



 


 
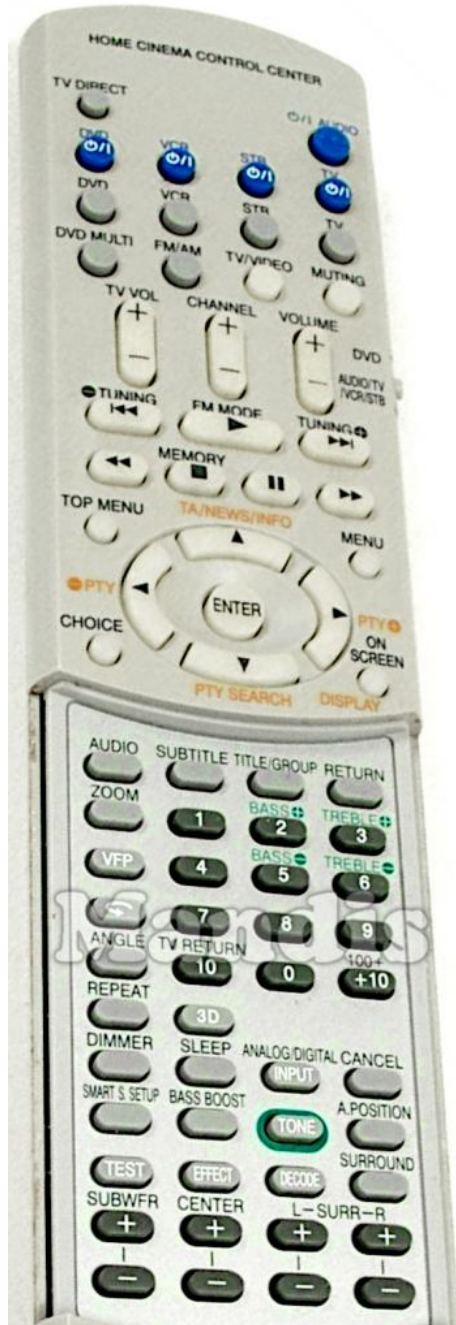 


Original	Recharge
 Power DVD	 Power
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Top Menu	 D.Menu / Top
 >>	 >> / Tune+
 Up	 Up
 Menu	 Menu / Home
 Left	 Shift + Left
 Enter	 OK
 Right	 Right
 Set Up	 Setup / OPT /
 Down	 Down
 On Screen	 Shift + Display / Media

Original	Recharge
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Title Group	 Shift + Title / Sound / Title
 Return	 Back / Return
 DVD Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 VFP Progressive	 Smart / List
 4	 4
 5	 5
 6	 6
 ←	 Left
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle





Original		Recharge	
	10		Guide / EPG / -/--
	0		0
	+10		Fav / Marker / PC
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	Cancel		Exit / Cancel / Clear
	HDD Sound Effect		Sound / Title
	Surround		Eject / Surround

Original		Recharge	





Original	Recharge
Power VCR	Shift + Power
Power STB	Power
VCR	Shift + Guide / EPG / -/-
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Volume+	Vol+
Channel-	CH- / Page-
Volume-	Vol-
Play VCR	Play / Slow
<< VCR	<< / Tune-
Stop/Memory	Stop / Hold
Pause VCR	Pause / Step / Freeze
>> VCR	>> / Tune+
1 VCR	Shift + 1
1 STB	1
2 VCR	Shift + 2
2 STB	2

Original	Recharge
3 VCR	Shift + 3
3 STB	3
4 VCR	Shift + 4
4 STB	4
5 VCR	Shift + 5
5 STB	5
6 VCR	Shift + 6
6 STB	6
7 VCR	Shift + 7
7 STB	7
8 VCR	Shift + 8
8 STB	8
9 VCR	Shift + 9
9 STB	9
+10 TV	Guide / EPG / -/-
0 VCR	Shift + 0
0 STB	0

