













 



 











 
 
 

 




 
 


 






 

 



















Original		Rechange		Original		Rechange	
	Power		Power		S-Mode		Sound / Title
	Source		AV / Input / RDS		Nicam / Audio		Audio / Lang I/II
	Sleep		Sleep / Timer		Up		Up
	Mute		Mute / Dimmer		Left		Left
	1		1		Enter		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		Red / Program		Red / Netflix / Search
	5		5		Red / Program		TV/Radio /
	6		6		Green / Goto		Green / APP / Repeat
	7		7		Yellow / Angle		Yellow / YouTube / Repeat
	8		8		Blue / USB/Card		Blue / Prime Video / Random
	9		9		Subtitle		Subtitle / EQ
	0		0		Info		Info / Angle
	-/- / +10		Guide / EPG / -/-		Menu / Exit		Menu / Home
	Recall		Back / Return		Menu / Exit		Exit / Cancel / Clear
	P-Mode		Picture / Format		+ / FAV+		Vol+





Original	Recharge
Canales / Repeat	Display / Media
EPG /	Shift + Guide / EPG / -/-
EPG /	D.Menu / Top
- / FAV-	Vol-
FAV / AB	Fav / Marker / PC
Teletext / Eject	Eject / Surround
Teletext / Eject	Text / Goto
Play/Pause / Mix	Play / Slow
Play/Pause / Mix	Pause / Step / Freeze
Stop / Hold	Stop / Hold
DVD-Setup	Setup / OPT /
<< / Index	<< / Tune-
Up / P.Up	Shift + Up
>> / Size	>> / Tune+
Left / Cancel	Shift + Left
OK / Reveal	Shift + OK
Right / Clock	Shift + Right

Original	Recharge
I<< / TV/Radio	I<< / Preset-
Down / P.Down	Shift + Down
>>I / Subpage	>>I / Preset+

