









Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Mute	 Mute / Dimmer	 Input	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Favourite	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 FAV-	 Shift + CH- /
 0	 0	 FAV+	 Shift + CH+ /
 Recall	 Back / Return	 Info	 Info / Angle
 Vol+	 Vol+	 P-Mode	 Picture / Format
 I/II	 Audio / Lang I/II	 S-Mode	 Sound / Title
 PR+	 CH+ / Page+	 ARC	 Display / Media




























 









	Original	Recharge
	EPG	Guide / EPG / -/--
	Text	Text / Goto
	Mix	+ Shift + Text /
	Size	Zoom / Size
	Reveal	D.Menu / Top
	Hold	Stop / Hold
	Index	Smart / List
	S.Page	Eject / Surround
	S.TITL	Subtitle / EQ
	Red	Red / Netflix / Search
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat
	Blue	Blue / Prime Video / Random

Original	Recharge




















Original	Rechange
Update	 Shift + D.Menu / Top Menu
Aft/Caf	 Shift + AV / Input / RDS
Reveal	 Setup / OPT /
Off/Tim	 Eject / Surround
Game Coo	 Smart / List
2.Fav P/C 2.	 Fav / Marker / PC
Chan.Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
Guide -/-- 1.	 Guide / EPG / -/--

Original	Rechange
0/10	 0
Menu audio	 Audio / Lang I/II
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Color+ P.Std	 Picture / Format
Color- S.Std	 Sound / Title
Audio+	 Shift + Vol+
Tune-	 << / Tune-
Tune+	 >> / Tune+
Menu	 Menu / Home
Mute	 Mute / Dimmer
Info	 Info / Angle
Subt.List	 Subtitle / EQ
Txt Stop	 Stop / Hold
Sleep Timer	 Sleep / Timer





Original	Rechange	
Return TV		TV/Radio /
Menu video		D.Menu / Top
Text		Text / Goto
Txt Expand		Zoom / Size
TV/AV		AV / Input / RDS
On/Off		Power
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

Original	Rechange	

