



Original	Recharge
TV System	Shift + TV/Radio / Program
Power	Power
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Recall	Shift + Back / Return
A-B	Shift + 0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0

Original	Recharge
Edit	Fav / Marker / PC
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode
Up / CH+	Shift + Up
Up / CH+	Up
Play	Play / Slow
Left	Left
Enter	OK
Right	Right
Back	Back / Return
Down / CH-	Shift + Down
Down / CH-	Down
Home	Menu / Home
Stop	Stop / Hold
Favor/Vol + / Sel	Vol+
Source	AV / Input / RDS
← Skip	<< / Tune-



