
 

 

 

 




 


 
 

 

 

 

 

 

 

 




Original	Recharge
 Power	 Power
 [i+]	 Info
 DTT/TV	 TV/R
 AV1	 Shift + 1
 AV2	 Shift + 2
 AV3	 Shift + 3
 AV4	 Shift + 4
 AV5	 Shift + 5
 RGB1	 Shift + 7
 RGB2	 Shift + 8
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Original	Recharge
 ♪ / S.Mode	 Shift + Dual
 ⏻ / P.Mode	 Shift + Format
 Vol+	 Vol +
 Vol-	 Vol -
 I/II	 Dual
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / [ ]< >		3D				
	[ ]≡		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[ ]≡i		List				
	[ ]≡X		Smart				
	[...]/Slide Show		Subt				
	[ ]≡?/Rotate		Pre Ch				
	[ ]≡		Text				
	Swivel		Sleep				
	[ ]<>		Format				
	Photo		Media				





 
 
 













 
 




 
 

 

 

 

 

 

 




	Original	Rechange	Original	Rechange
	Power	Power		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	Menu	TOP MENU MENU		
	Play	PLAY MODE		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		
	P+	CH +		
	P-	CH -		





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

