
 

 

 

 

 




 


 

 

 

 

 

 

 

 





Original	Recharge
 Power	 Power
 [i+]	 Info
 DTT/TV	 TV/R
 AV1	 Shift + 1
 AV2	 Shift + 2
 AV3	 Shift + 3
 AV4	 Shift + 4
 AV5	 Shift + 5
 RGB1	 Shift + 7
 RGB2	 Shift + 8
 Menu	 Menu
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Original	Recharge
 ♪ / S.Mode	 Shift + Dual
 ⏻ / P.Mode	 Shift + Format
 Vol+	 Vol +
 Vol-	 Vol -
 I/II	 Dual
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / []< >		3D				
	[]≡		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[]≡i		List				
	[]≡X		Smart				
	[...]/Slide Show		Subt				
	[]≡?/Rotate		Pre Ch				
	[]≡		Text				
	Swivel		Sleep				
	[]<>		Format				
	Photo		Media				




 



 


 




 


 
 





 









 








	Original	Rechange	Original	Rechange
	Power	Power		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	Menu	TOP MENU MENU		
	Play	PLAY MODE Play		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		
	P+	CH Ch +		
	P-	CH Ch -		





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

