 

 






 
 




 

 

 

 



 


 
 


 
 
 


 
 

 

 
 

 

 

 
 
 
 
 
 

 
 
 

 



 
 


 
 
 
 
 

 
 

 





 


 

 
 

 
 


 
 
 

 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		>>		>>
	Power AMP	 + 	Shift + Power		Preset+		Ch +
	CD		Red		Preset-		Ch -
	Recorder		Green		Pure Direct/Favorite		Pre Ch
	Network		Yellow		Vol+		Vol +
	Phono		Blue		Vol-		Vol -
	AUX		Smart		Mute		Mute
	Tuner		Media		Info		Info
	Internet Radio Preset 1	 + 	Shift + 1		Mode		Format
	Internet Radio Preset 2	 + 	Shift + 2		Source		AV
	Internet Radio Preset 3	 + 	Shift + 3		Menu		Menu
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	I<<		I<<		Right		Right
	>>I		>>I		Left		Left
	Stop		Stop		Enter		Ok
	<<		<<		1		1




 


 










 
 






 
 




 







Original		Rechange		Original		Rechange	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				







Original		Rechange		Original		Rechange	
	Power		Power		Pure Direct/Favorite		Pre Ch
	Power AMP		Shift + Power		Vol+		Vol +
	CD		Red		Vol-		Vol -
	Recorder		Green		Mute		Mute
	Network		Yellow		Info		Info
	Phono		Blue		Mode		Format
	AUX		Smart		Source		AV
	Tuner		Media		Menu		Menu
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	I<<		I<<		Right		Right
	>>I		>>I		Left		Left
	Stop		Stop		Enter		Ok
	<<		<<		1		1
	>>		>>		2		2
	Preset+		Ch +		3		3
	Preset-		Ch -		4		4





Original		Rechange		Original		Rechange	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				

