
 

 

 
 





Original	Rechange
 Standby	 Power
 Source	 AV / Input / RDS
 Freeze	 Pause / Step / Freeze
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Rechange
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play / Pause	 Play / Slow
 Down	 Down
 Stop	 Stop / Hold
 Vol +	 Vol+
 TXT	 Text / Goto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 CH -	 CH- / Page-
 Mix / Fav. List	 Fav / Marker / PC





	Original	Recharge	Original	Recharge
	Size / Subtitle	EQ Subtitle / EQ		
	Cancel / Audio	LANG I/II Audio / Lang I/II		
	Zoom	SIZE Zoom / Size		
	<< / Index	<< / Tune-		
	>> / Hold	>> / Tune+		
	I<< / Reveal	I<< / Preset-		
	>>I / Subpage	>>I / Preset+		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		

