



 




| Original | Rechange |
|--|---|
|  Standby-On |  Power |
|  Timer Prog |  Sleep / Timer |
|  Input Select |  AV / Input / RDS |
|  Open/Close / Eject |  Eject / Surround |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Prog+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Prog- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  System |  Shift + Setup / OPT / Tools |
|  0 |  0 |

| Original | Rechange |
|---|---|
|  Setup |  Setup / OPT / |
|  Audio |  Audio / Lang I/II |
|  Clear |  Exit / Cancel / Clear |
|  Menu / List |  Menu / Home |
|  Up |  Up |
|  Top Menu |  Shift + D.Menu / Top Menu |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Display |  Display / Media |
|  Down |  Down |
|  Return |  Back / Return |
|  I<< Skip |  I<< / Preset- |
|  Skip >>I |  >>I / Preset+ |
|  Variable Replay |  Shift + Play / |
|  Variable Skip |  Shift + << / |
|  << REV |  << / Tune- |



