 



 
 
 



 

 


 


 
 
 

 

 

 
 
 
 
 





 
 


 
 

 

 
 










Original	Rechange
 Power	 Power
 Open / Close	 Eject
 HDD	 Media
 DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt
 Prog+	 Ch +

Original	Rechange
 Prog-	 Ch -
 Input Select	 AV
 TV / DVD	 TV/R
 Top Menu	 Shift + Menu
 Menu	 Menu
 System Menu	 D. Menu
 Chapter Mark	 Guide
 Mark Erase	 Pre Ch
 Title List	 List
 Timer	 Sleep
 Display	 Info
 Timer List	 Mute
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down





Original	Recharge
Return	Back
Options	Options
I<<	I<<
>>I	>>I
⏏	Vol -
⏪ ⏩	Vol +
<< / <II / <I	<<
▶	▶
>> / I> / II>	>>
Time / Text	Text
⏸	⏸
⏏	⏏
Rec	Rec
Rec Stop	Shift + Stop
Rec Mode	Shift + Rec
Synchro Rec	Red
TV Power	Shift + Power

Original	Recharge
TV Input	Shift + AV
TV Prog+	Shift + Ch +
TV Vol+	Shift + Vol +
TV Vol-	Shift + Vol -
TV Prog-	Shift + Ch -

