











 







 



 



 

 



 









 



 
 












 









Original	Rechange	Original	Rechange
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 Power	 Power	 *	 Setup / OPT /
 1	 1	 P-	 CH- / Page-
 2	 2	 Home	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 ≡	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 ←	 Back / Return
 9	 9	 Down	 Down
 (T)	 Display / Media	 Source	 AV / Input / RDS
 0	 0	 Exit	 Exit / Cancel / Clear
 List	 Smart / List	 Guide	 Guide / EPG / -/-
 Vol+	 Vol+	 Text	 Text / Goto
 [i]	 Info / Angle	 O)/Lang	 Audio / Lang I/II
 P+	 CH+ / Page+	 Subt.	 Subtitle / EQ



