




 


 
 
 

 
 


 
 



 

 


 




 


 

 
 
 
 

 


 
 
 




 

 















 


 






 
 


 
 


 





 


 









Original	Recharge	Original	Recharge
 Power	 Power	 I<< Skip	 I<<
 1	 1	 Skip >>I	 >>I
 2	 2	 << Slow/Search	 <<
 3	 3	 Slow/Search >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 i/Status	 Info
 8	 8	 X/Exit	 Exit
 9	 9	 Option	 Options
 0	 0	 Return	 Back
 Recall/Last View	 Pre Ch	 Direct Navigator	 List
 Radio/Tv	 TV/R	 Guide	 Guide
 CH/Page+	 Ch +	 Function Menu	 Menu
 CH/Page-	 Ch -	 Up	 Up
 Internet	 Smart	 Down	 Down
 Skype	 Media	 Right	 Right

Original	Recharge	Original	Recharge
 I<< Skip	 I<<	 Skip >>I	 >>I
 << Slow/Search	 <<	 Slow/Search >>	 >>
 Stop	 Stop	 Pause	 Pause
 Play	 Play	 i/Status	 Info
 X/Exit	 Exit	 Option	 Options
 Return	 Back	 Direct Navigator	 List
 Guide	 Guide	 Function Menu	 Menu
 Up	 Up	 Down	 Down
 Right	 Right		





Original	Rechange
Left	Left
OK	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
	+
Rec Mode	Shift + Rec
Text	Text
STTL	Subt
Prog/Check	Sleep
Chapter	AV
Time Slip	Eject
Audio	Dual
Drive Select	D. Menu
	+
Del	Shift + Exit
Manual Skip -10s	Format

Original	Rechange
Manual Skip +60s	3D
	+
Power Tv	Shift + Power
	+
Av Input Tv	Shift + AV
Vol+ Tv	Vol +
Vol- Tv	Vol -
	+
CH+ Tv	Shift + Ch +
	+
CH- Tv	Shift + Ch -

