



Original		Rechange		Original		Rechange	
	Power		Power		Guide		Guide
	Mute		Mute		Exit		Exit
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Input		AV
	7		7		Menu		Menu
	8		8		Fav. CH		Pre Ch
	9		9		Vol. +		Vol +
	0		0		Vol.-		Vol -
	Jump		Back		CH. +		Ch +
	-/--		Shift + Guide		CH.-		Ch -
	S.Mode		Shift + Dual		Rec		Rec
	I-II		Dual		DTV / Radio		TV/R
	P.Mode		Format		Sleep		Sleep





Original	Rechange
Subtitle	Subt
P.Size	Eject
Subpage	Shift + Subt
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
[=i]	Smart
[=?]	Media
[=↓]	3D
[=□]	Shift + Stop
[=] / [/ =]	Text
Stop	Stop
Play/Pause / Timeshift	Play
Play/Pause / Timeshift	Pause
Info	Info
I<<	I<<

Original	Rechange
>>	>>
<<	<<
>>	>>

