 





Original	Rechange	Original	Rechange
 Power	 Power	 FAV	 Pre Ch
 Mute	 Mute	 Page+	 Ch +
 1	 1	 Page-	 Ch -
 2	 2	 Up/CH+	 Up
 3	 3	 Down/CH-	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Red	 Red
 0	 0	 Green	 Green
 Info	 Info	 Yellow	 Yellow
 Recall	 Back	 Blue	 Blue
 Menu	 Menu	 Audio	 Dual
 EPG	 Guide	 Pause	 Pause
 Exit	 Exit	 TTX	 Text





Original		Recharge		Original		Recharge	
	Subtitle		Subt				
	Tv/Radio		TV/R				

