



Original	Recharge	Original	Recharge
On	Power	Level Down	Shift + CH- /
Standby	Shift + Power	Level Up	Shift + CH+ /
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
CH+/Disc+	CH+ / Page+	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
CH-/Disc-	CH- / Page-	>>	>> / Tune+
Left	Left	Rec / Random	Blue / Prime Video / Random
Enter	OK	Rec / Random	Rec / Rec Mode
Right	Right	Pause	Pause / Step / Freeze
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio Sel	Audio / Lang I/II	Input Sel. V1	1
CH Sel / Top Menu	D.Menu / Top	Input Sel. V2	4
Test / Menu	Menu / Home	Input Sel. TAP	5
Muting	Mute / Dimmer	Input Sel. TUN	6















Original	Recharge	Original	Recharge
V3 Input Sel. V3	AUX - HDD 7 7		
V4 Input Sel. V4	USB 8 8		
V5 Input Sel. V5	BLUETOOTH 9 9		
PH Input Sel. PH	HDMI - SAT 0 0		
1 Pure A	SHIFT + TV 1 Shift + 1		
2 Direct	SHIFT + DVD 2 Shift + 2		
3 Stereo	SHIFT + CD - STB 3 Shift + 3		
4 Surr.	SURROUND Eject / Surround		
4 Surr.	SHIFT + VIDEO 4 Shift + 4		
5 All St.	SHIFT + TAPE 5 Shift + 5		
6 DSP	SHIFT + TUNER 6 Shift + 6		
7 SP A	SHIFT + AUX - HDD 7 Shift + 7		
8 SP B	SHIFT + USB 8 Shift + 8		
9 CINE FLTR	SHIFT + BLUETOOTH 9 Shift + 9		
+10 Display	MEDIA DISPLAY Display / Media		
0 Dimmer	SHIFT + DIMMER MUTE Shift + Mute / Dimmer		
SEARCH ZONE 2 ENTER	LIST SMART Smart / List		

Original	Recharge	Original	Recharge





Original	Rechange
 Sleep	 Sleep / Timer
 On	 Power
 Standby	 Shift + Power
 Return	 Back / Return
 Setup	 Setup / OPT /
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-
 Audio Sel /	 Audio / Lang I/II
 Audio Sel /	 AV / Input / RDS
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Muting	 Mute / Dimmer
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 I<<	 I<< / Preset-

Original	Rechange
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Eject	 Eject / Surround
 Input Sel. DVD	 Shift + 2
 Input Sel. CD	 Shift + 3
 Input Sel. V1	 Shift + 1
 Input Sel. V2	 Shift + 4
 Input Sel. TAP	 Shift + 5
 Input Sel. TUN	 Shift + 6
 Input Sel. V3	 Shift + 7
 Input Sel. V4	 Shift + 8
 Input Sel. V5	 Shift + 9














Original	Rechange	Original	Rechange
PH Input Sel. PH	SHIFT + 0 HDMI - SAT Shift + 0		
1 1	TV 1 1		
2 2	DVD 2 2		
3 3	CD - STB 3 3		
4 4	VIDEO 4 4		
5 5	TAPE 5 5		
6 6	TUNER 6 6		
7 7	AUX - HDD 7 7		
8 8	USB 8 8		
9 9	BLUETOOTH 9 9		
+10 / -- / --- DISPLAY	GUIDE EPG Guide / EPG / -- / ---		
0 0	HDMI - SAT 0 0		
SEARCH ZONE 2 ENTER Search/Enter	PC FAV MARKER Fav / Marker / PC		
SEARCH ZONE 2 ENTER Search/Enter	NETFLIX Red / Netflix / Search		

Original	Rechange





Original		Rechange		Original		Rechange	
	On		Power		2		2
	Standby		Shift + Power		3		3
	Disc+		CH+ / Page+		4		4
	Vol+		Vol+		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	Subtitle		Subtitle / EQ		8		8
	I<<		I<< / Preset-		9		9
	Play		Play / Slow		+10		Guide / EPG / -/-
	>>I		>>I / Preset+		0		0
	<<		<< / Tune-				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Eject		Eject / Surround				
	1		1				

