


 





 





 



 















 







 

 









 

 





 








Original	Recharge	Original	Recharge
 Power	 Power	 Cancel/PTY	 Exit
 Pairing	 Smart	 Vol+	 Vol +
 Bluetooth	 Media	 Vol-	 Vol -
 CD	 Yellow	 Muting	 Mute
 USB	 AV	 Up	 Up
 Tuner	 Green	 Down	 Down
 Audio In	 Red	 Right	 Right
 Digital In	 Blue	 Left	 Left
 I<<	 I<<	 Enter	 Ok
 >>I	 >>I	 Menu	 Menu
 Stop	 Stop	 1	 1
 Play	 Play	 2	 2
 Pause	 Pause	 3	 3
 Display	 Info	 4	 4
 Program/Tuner	 Options	 5	 5
 Random	 Guide	 6	 6
 Repeat/Memory	 Text	 7	 7





	Original	Rechange	Original	Rechange
	8	8		
	9	9		
	0	0		
EX BASS	EX Bass	SOUND DUAL		
SOUND MODE	Sound Mode	AD SUBT		
SURROUND	Surround	SEARCH TV/R		
DIMMER / CONTRAST	Dimmer/Contra	RETURN BACK		
FOLDER / P.CALL	Folder/R.Call Up	+ CH		
FOLDER / P.CALL	Folder/P.Call	- CH		
SLEEP	Sleep	PROG SLEEP		
ON / OFF	Timer On/Off	PICTURE FORMAT		
TIMER SET	Timer Set	ECO 3D		

